



### H Bridge DBW Module

- S1** – Connect to IGN Outputs from Syvecs or Fuel/PWM outputs with 5v Pullup (1k)
- B+** - Connect to 12v Supply
- B-** - Connect to Power Ground on ECU
- M1** – Motor +
- M2** – Motor –

PWM Freq = 3800hz  
Neutral Position = 50%  
Min duty = 15%  
Max duty = 85%

Email [Support@Syvecs.co.uk](mailto:Support@Syvecs.co.uk) for any further Advise