

91	PWM3	Starter Relays
92	PWM7	Brake Servo Relay
93	FUEL11	Cam Adjuster B2 Intake
94	FUEL15	Cam Adjuster B2 Exhaust
95	FUEL19	DI12 Injector 1
96	FUEL23	DI12 Injector 2
97	PWRGND	
98	HBRIDGE 4	DBW 2 -
99	PWM2	
100	PWM6	Boost control Sol
101	FUEL10	DI12 Injector 3
102	FUEL14	DI12 Injector 4
103	FUEL18	DI12 Injector 5
104	FUEL22	DI12 Injector 6
105	PWRGND	
106	HBRIDGE 3	DBW 2 +
107	PWM1	Fuel Pump
108	PWM5	Cooling Fans
109	FUEL09	DI12 Injector 7
110	FUEL13	DI12 Injector 8
111	FUEL17	DI12 Injector 9
112	FUEL21	DI12 Injector 10
113	PWRGND	
114	IGN05	Ignition Coil Cyl 5
115	IGN06	Ignition Coil Cyl 6
116	IGN07	Ignition Coil Cyl 7
117	IGN08	Ignition Coil Cyl 8
118	IGN09	Ignition Coil Cyl 9
119	IGN10	Ignition Coil Cyl 10
120	IGN11	DI Spill Valve 1
121	IGN12	DI Spill Valve 2

Email Support@syvecs.co.uk for a base map to suit your setup.