

SYVECS LTD

V1.1



Audi RS3 8V Plug in kit- S7D

This document is intended for use by a technical audience and describes a number of procedures that are potentially hazardous. Installations should be carried out by competent persons only.

Syvecs and the author accept no liability for any damage caused by the incorrect installation or configuration of the equipment.

Please Note that due to frequent firmware changes certain windows might not be the same as the manual illustrates. If so please contact the Syvecs Tech Team for Assistance.

Support@Syvecs.com

Parts Supplied:

- Syvecs S7D ECU
- Acc Connector

Installation

1 Remove the Negative Terminal from the battery on the Vehicle to be extra safe with electrical components. This is found in the rear boot under the carpet.



2 Unplug the Current Sense connector on the battery and leave this disconnected. (Allows Maximum Charging)



3 Unplug and Remove the Factory ECU



4 Fit the S7D Plug in ECU in the same bracket

5 Mount the S7D into the new bracket and plug in the provided 26 way acc connector and run the ethernet cable into the Cabin



6 Reconnect the battery Negative Terminal and proceed to loading a base calibration to the Ecu.
- <https://www.youtube.com/watch?v=jqDPKCQYzo0&t=195s>

Calibration Switching

The Cruise lever on the RS3 8V is used to do calibration switching on the Syvecs Ecu.

Cruise Down = Cal Down

Cruise Up = Cal Up

Cruise On - Cruise Switch

Cruise Back - Cal Override (Rolling Antilag)



The Rpm Gauge will show the active CalSelect selection when changing is preformed via cruise levers. The HP Gauge will also show Ethanol Content



Custom Features

FlexFuel Content - The original dash displays the Ethanol content (FuelComp) in the Power Gauge on the dash when changing calibration switch position. It is displayed for 1 Second.



Map Sensor Selection - The OEM Map sensor is SENT Protocol on the RS3 and its limited with its range. Some owners decide they wish to fit increased pressure which are 0-5v output instead of SENT.



This is possible by changing the Input Configuration of the Map Sensor under sensors.

5V Bipolar = SENT Protocol


5v = 0-5v ADC



Custom Features

Specific Software Options

Due to the number of Cars that the DAZA Engine is fitted to, an ECU Coding setup needs adjusting in Scal to suit the model of your VAG Group Car. This is found at the bottom under I/O Configuration

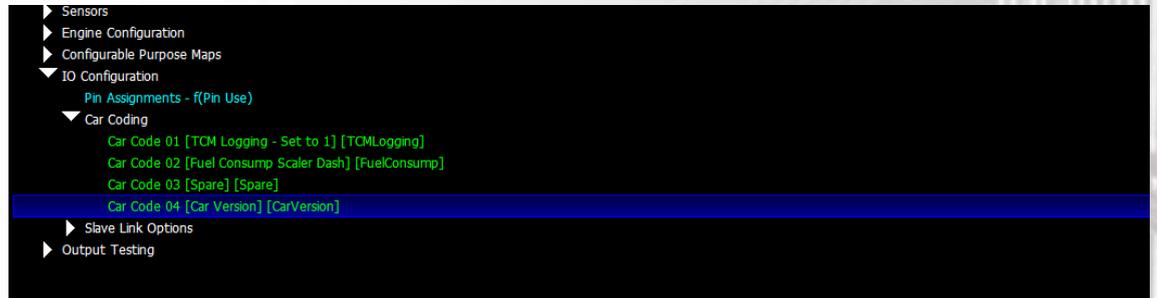

Car Code 4 Values

- 0 - RS3
- 1 - TTRS
- 2 - RS3 China
- 3 - RS3 USA

DSG TCM Logging

The Syvecs kit allows logging of the Clutch pressures from the DSG Gearbox. To

enable this Set Car Code1 = 1


IMPORTANT - WHEN DOING GEAR RELEARNS OR COMMUNICATIONS WITH THE DSG ECU

VIA VAGCOM SET THIS CARCODE1 = 0

Injector Size is set in Fuel Consumption - Injector Consumption Scaling for

MPG Gauge Injector Size / 60 = ml/s value

OEM DI Injectors are set in the Base map @ 18ml/s

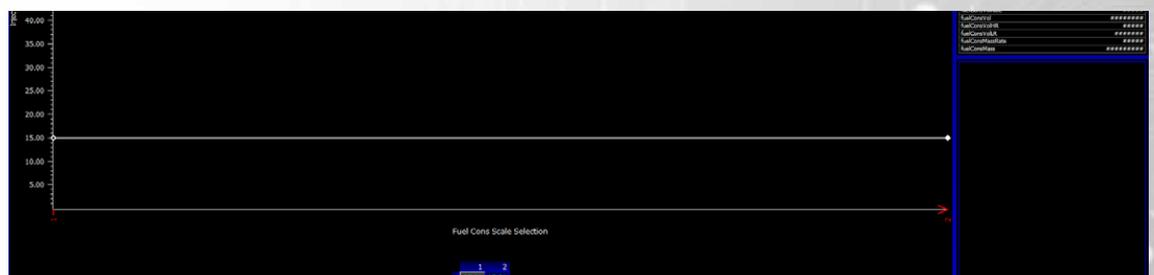


Support / Training

Dealer Support can be obtained from Support@Syvecs.com
End Users Support from Syvecs Forum

A getting started help video is found here for plug in kits
<https://www.youtube.com/watch?v=jqDPKCQYzo0&t=1498s>



More Syvecs Help videos can be found on our YouTube Page
www.youtube.com/SyvecsHelp

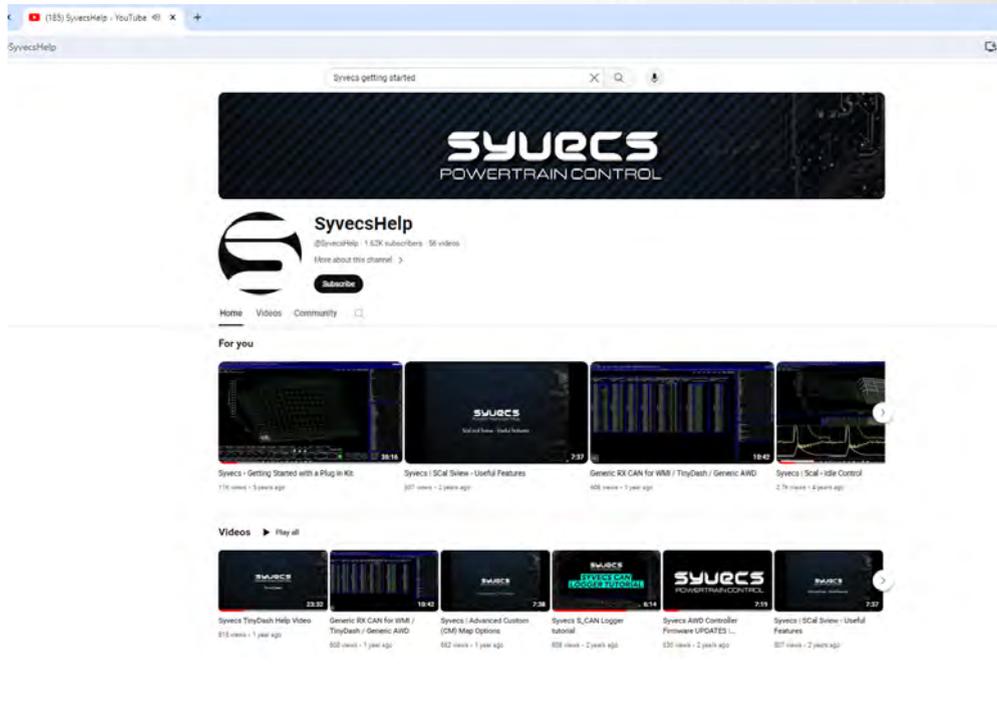

Pinouts

<i>Syvecs Description</i>	<i>Syvecs S7D Pinout</i>	<i>Function</i>	<i>OEM Function</i>
A	DESCRIPTION	CONNECTOR A	
	PART NUMBER	4-1437290-0	
	NOTES:	34 Way - Key1	
PWR CTR OUT	A1	MAIN RELAY OUTPUT	
H-Bridge1	A2	H-Bridge1	DBW +
H-Bridge2	A3	H-Bridge2	DBW -
H-Bridge3	A4	H-Bridge3	WG Solenoid
H-Bridge4	A5	H-Bridge4	Evap
H-Bridge5	A6	H-Bridge5	Spare Output
H-Bridge6	A7	H-Bridge6	Starter Relay
H-Bridge7	A8	H-Bridge7	Intake Manifold Flap (N316)
H-Bridge8	A9	H-Bridge8	Coolant Switch Pump
GDI LS1	A10	Fuel 1 / Low Side GDI 1	Spare Output
GDI LS2	A11	Low Side GDI 2	Injector 4 -
GDI LS3	A12	Fuel 3 / Low Side GDI 3	Port Injector 1 (N532)
GDI LS4	A13	Low Side GDI 4	Injector 2 -
GDI LS5	A14	Fuel 5 / Low Side GDI 5	Port Injector 2 (N533)
GDI LS6	A15	Low Side GDI 6	Injector 5 -
GDI LS7	A16	Fuel 7 / Low Side GDI 7	Port Injector 3 (N534)
GDI LS8	A17	Low Side GDI 8	Injector 3 -
GDI HS1/2	A18	GDI HI Side 1-2	Injector 4 +
GDI HS3/4	A19	GDI HI Side 3-4	Injector 2 +
GDI Pump 1 HS	A20	GDI Pump 1 Hi Side	GDI Pump HS
GDI HS5/6	A21	GDI HI Side 5-6	Injector 5 +
GDI HS7/8	A22	GDI HI Side 7-8	Injector 3+
GDI Pump 2 HS	A23	GDI Pump 2 Hi Side	Injector 1+
GDI Pump 1 LowSide	A24	GDI Pump 1 Lo Side / Fuel15 Output	GDI Pump LS
GDI Pump 2 LowSide / Injector LS	A25	GDI Pump 2 Lo Side / Fuel16 Output	Injector 1 -
IGN1	A26	CYL 1 IGNITION OUTPUT	IGN1 (N70)
IGN2	A27	CYL 2 IGNITION OUTPUT	IGN2 (N127)
IGN3	A28	CYL 3 IGNITION OUTPUT	IGN3 (N291)
IGN4	A29	CYL 4 IGNITION OUTPUT	IGN4 (N292)
IGN5	A30	CYL 5 IGNITION OUTPUT	IGN5 (N292)
IGN6	A31	CYL 6 IGNITION OUTPUT	Tacho Sync
PWRGND	A32	POWER GROUND	PwrGnd
PWRGND	A33	POWER GROUND	PwrGnd
PWRGND	A34	POWER GROUND	PwrGnd

<i>Syvecs Description</i>	<i>Syvecs S7D Pinout</i>	<i>Function</i>	<i>OEM Function</i>
B	DESCRIPTION	CONNECTOR B	
	PART NUMBER	3-1437290-7	
	NOTES:	26 Way - Key1	
PWRGND	B1	POWER GROUND	PwrGnd
CAN2 L	B2	Can 2	
CAN2 H	B3	Can 2	
KNOCK 1	B4	KNOCK 1	
KNOCK 2	B5	KNOCK 2	
PVBAT	B6	CONSTANT 12V	
IVBAT	B7	12v	
LAM1A	B8	Lamv / LamD1+ / LamLun1	
LAM1B	B9	Lami / LamD1- / LamIP1	
LAM1C	B10	LamLIA1	
LAM1D	B11	LamGND / LamLVM1	
LAM1HEATER	B12	LAMBDA HEATER	
IVBAT	B13	12V	
LAM2A	B14	Lamv / LamD1+ / LamLun1	
LAM2B	B15	Lami / LamD1- / LamIP1	
LAM2C	B16	LamLIA1	
LAM2D	B17	LamGND / LamLVM1	
LAM2HEATER	B18	LAMBDA HEATER	
IVBAT	B19	12V	
KLINE	B20	KLINE	
RS232RX	B21	RS232RX	
RS232TX	B22	RS232TX	
LANRX-	B23	Cat5 Pin2	
LANRX+	B24	Cat5 Pin1	
LANTX-	B25	Cat5 Pin6	
LANTX+	B26	Cat5 Pin3	

Pinouts

<i>Syvecs Description</i>	<i>Syvecs S7D Pinout</i>	<i>Function</i>	<i>OEM Function</i>
C	DESCRIPTION	CONNECTOR C	
	PART NUMBER	4-1437290-1	
	NOTES:	34 Way - Key2	
KNOCKGND	C1	KNOCKGND	Knock -
ANGND	C2	SENSOR GND	Tested
ANGND	C3	SENSOR GND	Tested
ANGND	C4	SENSOR GND	
5V OUT	C5	5V OUT	Tested
5V OUT	C6	5V OUT	Tested
5V OUT	C7	5V OUT	
CAN1 L	C8	Can 1 Low	Powertrain Can
CAN1 H	C9	Can 1 High	Powertrain Can
AN01	C10	BI-POLAR INPUTS	Start Request
AN02	C11	BI-POLAR INPUTS	Di Pressure
AN03	C12	BI-POLAR INPUTS	
AN04	C13	BI-POLAR INPUTS	
AN05	C14	UNI-POLAR INPUTS	VVT1In Pos
AN06	C15	UNI-POLAR INPUTS	VVT1Ex Pos
AN07	C16	UNI-POLAR INPUTS	Crank Sensor
AN08	C17	UNI-POLAR INPUTS	Brake Lt Sw
AN09	C18	VOLT-INPUTS	TPS1A
AN10	C19	VOLT-INPUTS	TPS1B
AN11	C20	VOLT-INPUTS	PPSA
AN12	C21	VOLT-INPUTS	PPSB
AN13	C22	RESISTIVE INPUTS	Coolant Temp (G62)
AN14	C23	RESISTIVE INPUTS	Intake Air Temp
AN15	C24	RESISTIVE INPUTS	EGT1
AN16	C25	RESISTIVE INPUTS	EGT2
EGT1-	C26	EGT1 -	
EGT1+	C27	EGT1 +	
PWR CTR IN	C28	MAIN RELAY INPUT SW	Key On sig (15)
AN S1	C29	UNI-POLAR INPUTS	Intake Pos Flap
AN S2	C30	UNI-POLAR INPUTS	Fuel Pressure Low Side
AN S3	C31	UNI-POLAR INPUTS	SENT MAP
AN S4	C32	UNI-POLAR INPUTS	SENT ACT
AN S5	C33	UNI-POLAR INPUTS	Pre Throttle Map
AN S6	C34	UNI-POLAR INPUTS	InterMediate Shaft Speed

<i>Syvecs Description</i>	<i>Syvecs S7D Pinout</i>	<i>Function</i>	<i>OEM Function</i>
D	DESCRIPTION	CONNECTOR D	
	PART NUMBER	3-1437290-8	
	NOTES:	26 Way - Key2	
DVBAT1	D1	GDI Power Supply	
DVBAT2	D2	GDI Power Supply	
DVBAT3	D3	GDI Power Supply	
DVBAT4	D4	GDI Power Supply	
FUEL9	D5	PWM / FUEL OUTPUT	Port Injector 4 (N535)
FUEL10	D6	PWM / FUEL OUTPUT	Port Injector 5 (N536)
FUEL11	D7	PWM / FUEL OUTPUT	Fuel Pump PWM
FUEL12	D8	PWM / FUEL OUTPUT	Cooling Fan PWM
FUEL13	D9	PWM / FUEL OUTPUT	Turbo Recirc (N249)
FUEL14	D10	PWM / FUEL OUTPUT	Exhaust Cam Solenoids A
LSO1	D11	PWM OUTPUT	VVT1 Int (N205)
LSO2	D12	PWM OUTPUT	VVT1 Ex (N316)
LSO3	D13	PWM OUTPUT	Oil Pressure Valve
LSO4	D14	PWM OUTPUT	Crank Case Breather
LSO5	D15	PWM OUTPUT	Coolant Shut Off Valve
LSO6	D16	PWM OUTPUT	Coolant Pump PWM
EGT2-	D17	EGT2 -	
EGT2+	D18	EGT2 +	
NC	D19	NC	
NC	D20	NC	
NC	D21	NC	
NC	D22	NC	
CAN3L	D23	CAN3L	CAN3L
CAN3H	D24	CAN3H	CAN3H
PWRGND	D25	POWER GROUND	
PWRGND	D26	POWER GROUND	

Acc Connector Pinouts



ACC	DESCRIPTION	
	PART NUMBER	3-1437290-7
	NOTES:	26 Way - Key1
B1	GND	Ground
B2	Fuel 1	Spare Output
B3	LSO3	Spare Output - Slave1 Out13
B4	LSO4	Spare Output - Slave1 Out14
B5	LSO5	Spare Output - Slave1 Out15
B6	LSO6	Spare Output - Slave1 Out16
B7	12v	
B8	H-Bridge 5	Spare Output - Slave1 Out5
B9	CAN2L	Spare CAN
B10	CAN2H	Spare CAN
B11	RS232RX	
B12	RS232TX	
B13	LAM2A	Spare Input - S1AN08
B14	EGT1-	K-Type EGT
B15	EGT1+	K-Type EGT
B16	AN03	Spare Input - BiPolar
B17	AN04	Spare Input - BiPolar
B18	AN15	Spare Input
B19	AN16	Spare Input
B20	S1AN4	Spare Input if NON SENT Map is used
B21	ANGround	Sensor Ground
B22	5V Out	5v Output for Sensors
B23	Cat5 Pin2	Ethernet
B24	Cat5 Pin1	Ethernet
B25	Cat5 Pin6	Ethernet
B26	Cat5 Pin3	Ethernet